



FlexiModal SASU 11 rue du Clos Courtel - CS30817 35708 RENNES cedex 7 **FRANCE** www.fleximodal.fr

## Tools required for mounting

3 mm 4 mm 5 mm


## Preliminary

Position the bike on a flat surface on its stand and rear wheel.

## Mounting

Position thehitch using the following fasteners

- M6 screw from the rear of the brake caliper
- VIs M5 (or M6 depending on series) of the mudguard
- M6 luggage rack screw (incompatible with the attachment)

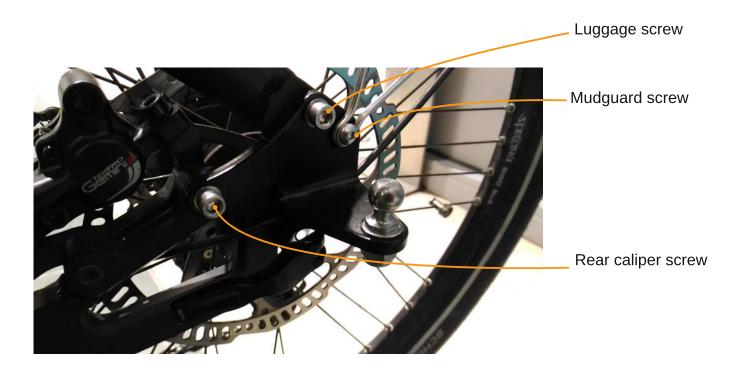

When mounting, be careful not to pinch the rear light power cable.

After assembly, check the rear brake of the bike for proper application and operation.