



Mounting

instruction

BicyLift Hitch
on
Riese & Muller Packster
or nevo

FlexiModal SASU
11 rue du Clos Courtel - CS30817
35708 RENNES cedex 7
FRANCE
www.fleximodal.fr

Tools required for mounting



Preliminary


Position the bike on a flat surface on its stand and rear wheel.

Mounting

Position the hitch using the following fasteners

- M8 screw of the dropout fixing

2x M8 Dropout screws

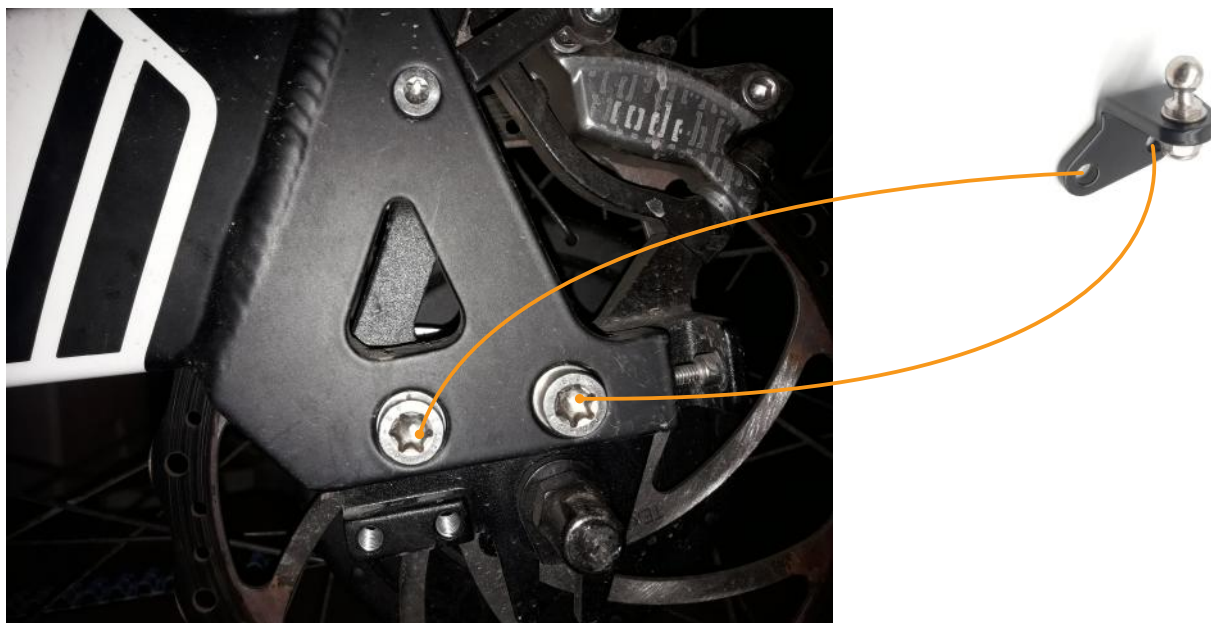

After assembly, check the rear brake of the bike for proper application and operation.