



BicyLift Hitch **Omnium**

FlexiModal SASU 11 rue du Clos Courtel - CS30817 35708 RENNES cedex 7 **FRANCE** www.fleximodal.fr

Tools required for mounting

3 mm 4 mm 5 mm


Preliminary

Position the bike on a flat surface on its stand.

Mounting

Position thehitch using the following fasteners

- M6 screws on the the brake caliper
- M5 screw (or M6 depending on series) of the mudguard
- M6 luggage rack screw (incompatible with the attachment)

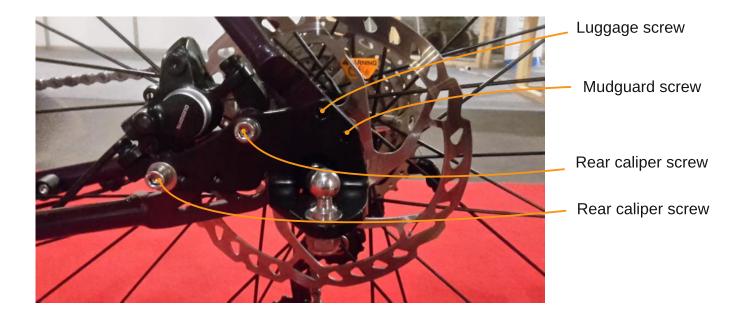

After assembly, check the rear brake of the bike for proper application and operation.