



Mounting guide

**BicyLift hitch for
Urban Arrow >2019**

FlexiModal SAS
11 rue du Clos Courtel - CS30817
35708 RENNES cedex 7
FRANCE
www.fleximodal.fr

Tools




Allen key 5mm & 6mm

Precondition

Position the bike on a flat surface on its stand and rear wheel.

Mounting

Position the screws using the indicated threads.

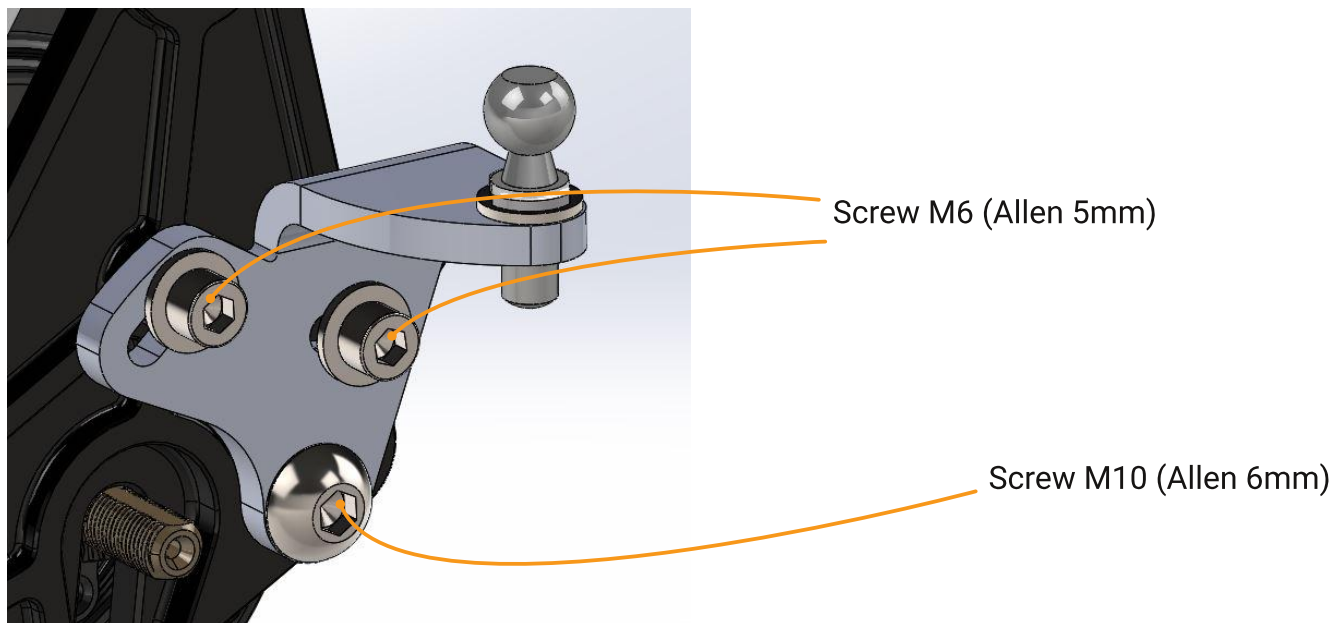

During assembly, ensure the verticality of the ball by taking advantage of the angular adjustment range.

After assembly, check that the screws are tightened and that the rear brake on the bike is working properly.

Always hitch the trailer with the drawbar on the horizontal position.

Regularly check the verticality of the ball and the tightening of the screws.