



Instruction

Assembly

Roll **Bicylift**
— levez, livrez —

FlexiModal SASU
11 rue du Clos Courtel - CS30817
35708 RENNES cedex 7
FRANCE
www.fleximodal.fr

Preamble


To facilitate transport, the clamps that hold the fork on the roll are not mounted.

This instructions explain how to install them correctly.



Assembly

1- Retrieve the clamps temporarily installed for transport inside the roll.

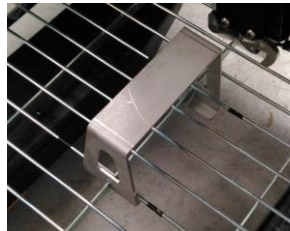


2- Lie down or lift the empty roll to safely access the underside of the roll

3- Position one side of the clamp on the marked location (by the black markers)



4- Lock the other side of the clamp on the other materialized location

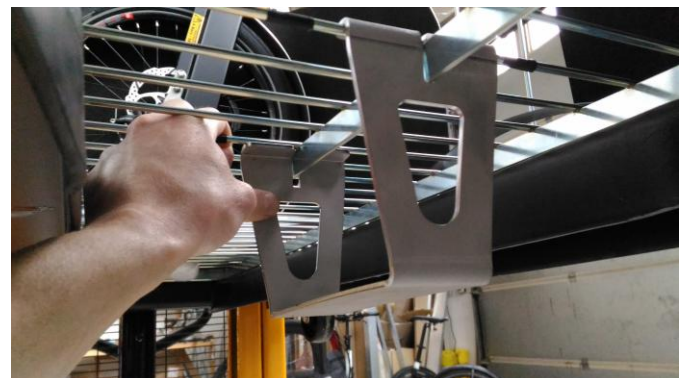

5- Check that the clamp is properly locked, then proceed in the same way for the other clamp



You can now slide the BicyLift fork into these clamps.

When using the roll, make sure that the maximum load is respected and that the load is properly secured.