



Instruction

Mounting

BicyLift Hitch
for
Douze Cycles V2

FlexiModal SASU
11 rue du Clos Courtel - CS30817
35708 RENNES cedex 7
FRANCE
www.fleximodal.fr


Required tools



Mounting

0- Position the bike on a flat surface on its stand and rear wheel.

1- remove the 2 M6 dropout fixing screws on the left side and the M5 mudguard fixing screw on the left side

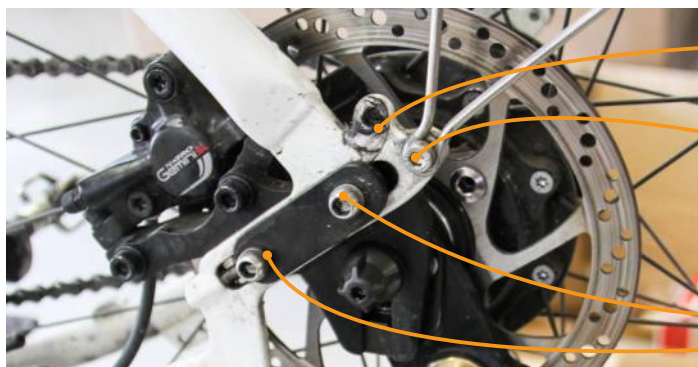

Screw luggage carrier
(not compatible with the trailer)


Screw mudguard

Screw Dropout

2- Remove the unscrewed plate from the dropout (in red on the picture).



3 - fix the hitch with the screws provided:

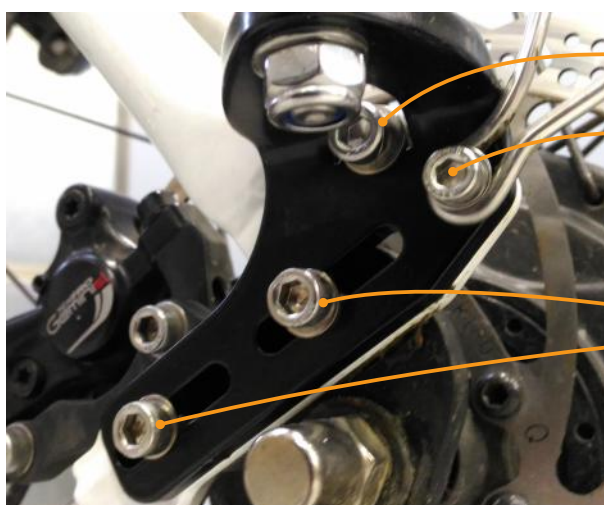

Screw M6x16 luggage carrier

Screw M5x16 mudguard

Screw M6x25 Dropout

Security check

Before using the hitch, check that the screws have been correctly positioned and tightened.

Make sure that the rear disc brake caliper has not been moved during operation and that the brake is fully operational.